



EIBENSTOCK

Elektrowerkzeuge

D	Originalbetriebsanleitung.....	3 - 15
GB	Original Instructions.....	16 - 27
F	Notice originale.....	28 - 39
NL	Oorspronkelijke gebruiksaanwijzing.....	40 - 51
DK	Original brugsanvisning	52 - 63
PL	Dokumentacja techniczno-ruchowa	64 - 75



EMF 150



Important Safety Instructions

Important instructions and warning notices are allegorized on the machine by means of symbols:



Before you start working, read the operating instructions of the machine.



Work concentrated and carefully. Keep your workplace clean and avoid dangerous situations.



In order to protect the user, take precautions.

During work you should wear ear protectors, goggles, dust mask, protective gloves and sturdy work clothes!



Use ear protection



Wear safety goggles



Wear a dust mask



Wear protective gloves



Warning of general danger



Warning of dangerous voltage



Warning of hot surface



Danger of being ripped or cut

Technical Data

Wall Chaser EMF 150

Rated voltage:	110 / 120 V ~	230 V ~
Power input:		2300 W
Rated Current:	20 A	
Order Number:	06710	06712

Frequency:	50 - 60 Hz
No-load speed:	7500 rpm
Max. disc diameter:	150 mm
Spindle connection:	Ø 22.2 mm
Cutting depth max.:	45 mm
Groove width max.:	46 mm
Protection class:	II
Degree of protection:	IP 20
Net weight:	ca. 5,8 kg
Interference suppression:	EN 55014 und EN 61000

Available accessories:

	Ordernumber:
Diamond cutting disc Standard	37440
Diamond cutting disc Premium	37441

Fields of application:

	Brick	Concrete	Gas concrete	Granite	Lime sand brick	Tiles
Standard	xxx		xx		xxx	x
Premium	xxx	xxx	x	xx	x	xx

x = suitable

xx = most suitable

xxx = optimal

Content of Delivery

Wall chaser with 2 diamond cutting discs, tool kit and operating instructions in a metal case.

Application for Indented Purpose

The wall chaser has to be used only completely mounted according to the mounting instructions.

The wall chaser is indented for professional use.

Together with a M-class vacuum cleaner and the appropriate diamond cutting discs the wall chaser may be used for cutting slots and grooves in mineral materials e.g. concrete, brick, gas concrete, granite, lime sand brick and tiles without using water.

Only use diamond cutting discs recommended by the manufacturer.

Safety Instructions



Safe work with the machine is only possible if you read this operating instruction completely and follow the instructions contained strictly.

Additionally, the general safety instructions of the leaflet supplied with the tool must be observed. Prior to the first use, the user should absolve a practical training.



If the mains cable gets damaged or cut during the use, do not touch it, but instantly pull the plug out of the socket. Never use the tool with damaged mains cable.



The tool must neither be wet nor used in humid environment.

- Do not use the tool in an environment with danger of explosion.
- Do not work on ladders.
- Do not drill into asbestos-containing materials.
- Modifications of the tool are prohibited.
- Never use the machine without dust guard.
- Always check the tool, cable and plug before use and plug before use. Have damages only repaired by specialists. Insert the plug into the socket only when the tool switch is off.
- When you work outside, the machine has to be used with a fault-current circuit breaker with max. 30 mA.
- The machine should only work under supervision of somebody. Plug and switch the machine off if it is not under supervision, in case of putting up and stripping down the machine, in case of voltage drop or when fixing or mounting an accessory.
- Switch the machine off if it stops for whatever reason. You avoid that it starts suddenly and not under supervision.
- Don't use the machine if a part of the housing is damaged or in case of damages on the switch, the cable or plug.
- **Pay attention that the speed indicated on the cutting disc meets or is higher than the max. speed indicated on the machine.**
- Use **only** diamond cutting wheels for your power tool.
- Wheels must be used only for recommended applications. For example : do not grind with the side of cutting wheel.
- Cutting wheels have to be stored and used carefully according to the instructions of the producer.
- Cutting discs flanges and other accessories must properly fit on the spindle of the power tool. Do not use any reducing pieces or adapters.
- Check the accessories before use. Do not use any products which are broken, cracked or damaged in another way.

- Before use, make sure that the tool is correctly fixed and fastened. Let it run idle for about 30 seconds in a safe position. If considerable vibrations occur or if other defects are recognised, switch off immediately.
- Always lead the mains and extension cable as well as the extraction hose to the back away from the machine.
- Power tools have to be inspected by a specialist in regular intervals.
- Never carry the machine at its cable.
- Do not touch rotating parts.
- Persons under 16 years of age are not allowed to use the tool.



- During use, the operator and other persons standing nearby have to wear suitable ear protectors, a dust mask, protection goggles as well as protective gloves.
- Make sure that persons in the work space are not endangered by particles flying around.
- Keep the handles dry, clean and free of oil and grease.
- **Attention! The tool still runs for a little while after the machine was switched off.**

For further safety instructions, please refer to the enclosure!



Electrical Connection

Before starting the machine check the correspondence between voltage and frequency according to the data mentioned on the identification plate. Voltage differences from + 6 % and – 10 % are allowed.


The wall chaser is made in protection class II.
 Only use extension cables with a sufficient cross-section. A cross-section which is too small could cause a considerable drop in performance and an overheating of machine and cable.
 The tool is equipped with a start-up speed limiter to prevent that swift automatic circuit breakers are unintentionally triggered.

Recommended minimum cross sections and maximum cable lengths

Mains voltage	Cross section in sq. mm	
	1.5	2.5
110V	-	40 m
230V	50 m	80 m

Switching on and off

The wall chaser EMF 150 is equipped with a lock-off button against unintentional switch-on.

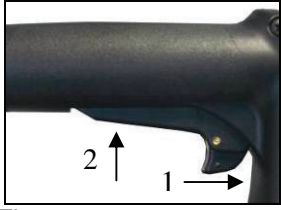

Switching-on: push the on/off switch forward (1) and then down (2)

Switching-off: release the on/off switch

Fig.1

Instructions for Use

Exercise caution when cutting slots in supporting walls; see section “Information on structural calculations”.

Do not strain the machine so heavily that it comes to a standstill.

Only use the Wall chaser dry cutting.

Adjust the cutting depth see section “Pre-selection the Cutting Depth”. To compensate inaccuracies that occur when breaking away the fin, the cutting depth must be set approx. 3 mm deeper than the requested slot depth.

Place the machine with the front roll (cover) on the surface to be worked. Switch on the machine and slowly lower and plunge the cutting unit into the material.

Guide the machine with both handles, applying moderate feed, suited to the material being worked.

The wall chaser must always work in an up-grinding motion (sliding cut). Otherwise, the danger exists of it being pushed uncontrolled out of the cut.

Remove the remaining fin of the material with a break-out tool or a chiselling hammer. Curved cuts are not possible, as the diamond cutting discs could jam in the material.

When breaking through walls, e. g. with a rotary hammer, most of the chipping-off of the surface material can be avoided by first cutting in a slot with maximum cutting depth.

For cutting especially hard material, e. g. concrete with high pebble content, the diamond cutting disc can overheat and become damaged as a result. This is clearly indicated by circular sparking, rotating with the diamond cutting disc.

In this case, interrupt the cutting process and allow the diamond cutting disc to cool by running the machine for a short time with no load.

Noticeable decreasing work progress and circular sparking are indications of a blunt diamond cutting disc. Briefly cutting into abrasive material (e. g. lime-sand brick or the EIBENSTOCK-diamond-sharpening-stone) can re-sharpen the disc again.

Pre-selection of the Cutting Depth

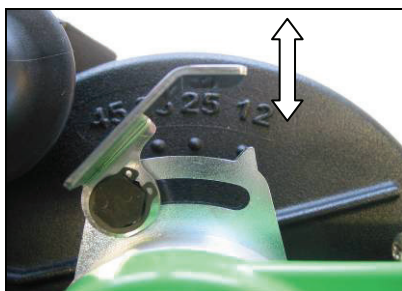


Fig.2

For adjusting the cutting depth open the locking lever.
By turning the protection cover adjust the required cutting depth on the scale and close the locking lever again.

The locking lever has to be locked firmly on working always.

Changing the Diamond Cutting Discs



Attention!

The Cutting discs, spacer discs and the flange nut might heat up enormously during operation. You could burn your hands or get cut or ripped by the segments.

Therefore, always use protective gloves when changing the grinding wheel.

Before any work on the tool, disconnect the plug from the mains!

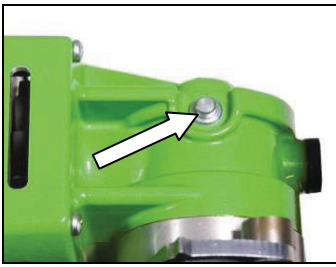


Fig.3

Press the spindle lock button to lock the work spindle .

Actuate the spindle lock button only when the work spindle is at a standstill.

Otherwise, the machine may become damaged.



Fig.4

Open the clamping screw with the face spanner and remove the diamond cutting discs as well as the spacer discs from the work spindle.

Clean the work spindle and all parts to be mounted.

- **Pre-selection of the Groove Width :**

The groove width results from the number and thickness of the spacer discs between the two diamond cutting discs and the cutting width of the diamond cutting discs.

The groove width is calculated as follows: groove width = Thickness of the spacer discs + width of the diamond cutting discs.

Thickness of the spacer discs: 2, 3, 4, 5, 10 and 17 mm

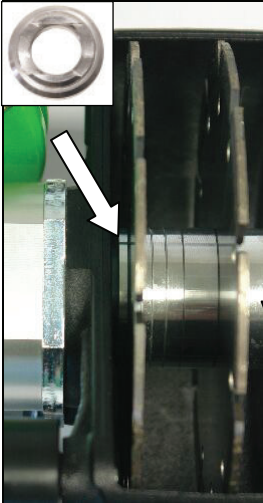


Fig 5

First the wheel flange has to be mounted on the work spindle (see arrow).

The wheel flange with its driving must have a correct seat on the work spindle.

Then mount one of the two diamond cutting discs.

After that put the spacer discs and the second diamond cutting disc according to the required groove width on the work spindle.



Press the spindle lock button to lock the work spindle (see arrow – Fig.4).

Screw on the clamping screw and tighten it with the face spanner (see Fig.5).

Instructions for assembly:

- **Regardless of the requested groove width, all spacer discs provided must always be mounted.**
Otherwise, the diamond cutting disc can become loose during operation and lead to injuries.
- **At least one spacer disc must be mounted between two diamond cutting discs.**
- **When mounting the diamond cutting discs, ensure that the direction of rotation arrows on the diamond cutting disc match with the rotation direction of the machine (see direction of rotation arrow on the protective hood).**
- **Always replace the diamond cutting discs in pairs.**
- **Use only original accessory!**
- **The wall chaser is in power and speed optimal adjusted to the EIBENSTOCK-diamond cutting discs.**
- **Thus you reach the best work result in consideration of the material to be worked on (see accessories).**

In order to check whether the spindle stop is released before you switch on the tool, turn the spindle slightly.

Let the machine run for a short period of time and in a safe position. If the machine does not run easily, stop working immediately.

Information on Structural Calculations

Slots in supporting walls are subject to the Standard DIN 1053 part 1, or country- specific regulations.

These regulations are to be observed under all circumstances.


Before starting work, consult the responsible structural engineer, architect or the construction supervisor.

The permitted slot depth and width depends on the slot length, wall thickness and the building material used.

Dust Extraction

Dust which occurs during your work is hazardous to health. That is why the EMF 150 must be used with a vacuum cleaner, and a dust mask has to be worn.

The suitable Wet/Dry Vacuum Cleaner DSS 25/35/50 is available as accessory. It can directly be attached to the connection on the dust hood.

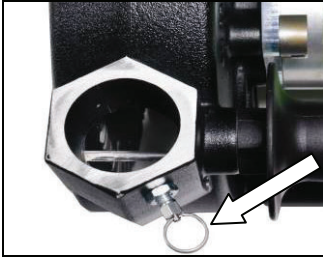

The suction hose can be locked against slipping out by means of the hose fixing.

Fig.6




Make the necessary drill hole as follows:

Put the suction hose in the connector of the hood.

Mark the plug-in depth with a crayon. (see arrow)

Abb.7

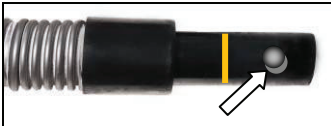

Drill 13 mm from this marking (line) a hole with diameter 6 mm in the nozzle.

Abb.8

When insert the suction hose pull the ring of the hose fixing and turn the nozzle till the fixation engages.

Overload Protection

In order to protect the operator, motor and tool, the wall chaser is equipped with an electronic and thermal overload protection.

Electronic: To warn the user against an overload of the machine due to too high contact pressure, a LED is attached to the switch grip. It does not light during idle run or at normal load. When the unit is overloaded the LED lights red, in this

case, the unit must be stress-relieved. You can continue working after having stress-relieved and switching OFF and ON the power tool again.

Thermal: In case of permanent overload, a thermocouple protects the motor against destruction. In this case, the tool switches off automatically and can only be restarted after a certain cooling period (approx. 2 minutes). The cooling period depends on the heating of the motor winding and the ambient temperature.

Care and Maintenance



Before the beginning of maintenance or repair works you have to disconnect the plug from the mains.

Repairs may be executed only by appropriately qualified and experienced personnel. After every repair the machine has to be inspected by an electric specialist. Due to its design, the machine needs a minimum of care and maintenance. However, the following points always have to be observed:

- Always keep the power tool and the ventilation slots clean.
- During work, please pay attention that no particles get inside the machine.
- In case of failure, a repair has to be carried out by an authorised service workshop.

Environmental Protection



Raw material recycling instead of waste disposal

To avoid damages on transportation, the power tool has to be delivered in a sturdy packing. Packaging as well as unit and accessories are made of recyclable materials and can be disposed accordingly.

The tool's plastic components are marked according to their material, which makes it possible to remove environmental friendly and differentiated because of available collection facilities.

Only for EU countries

Do not dispose of electric tools together with household waste material!



In observance of the European Directive 2012/19/EU on waste electrical and electronic equipment and its implementation in accordance with national law, electric tools that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.

Noise Emission / Vibration

The indication of noise emission is measured according to DIN 45 635, part 21. The level of acoustic pressure on the work place could exceed 85 dB (A); in this case protection measures must be taken.



Wear ear protectors!

The typical hand-arm vibration is below 2.5 m/s².
Measured values determined according to EN 60 745.

The vibration emission level given in this information sheet has been measured in accordance with a standardized test given in EN 60745 and may be used to compare one tool with another. It may be used for a preliminary assessment of exposure.

The declared vibration emission level represents the main applications of the tool. However if the tool is used for different applications, with different accessories or poorly maintained, the vibration emission may differ. This may significantly increase the exposure level over the total working period.

An estimation of the level of exposure to vibration should also take into account the times when the tool is switched off or when it is running but not actually doing the job. This may significantly reduce the exposure level over the total working period.

Identify additional safety measures to protect the operator from the effects of vibration such as: maintain the tool and the accessories, keep the hands warm, organisation of work patterns.

Dust Protection

Dust from material such as paint containing lead, some wood species, minerals and metal may be harmful. Contact with or inhalation of the dust may cause allergic reactions and/or respiratory diseases to the operator or bystanders.

Certain kinds of dust are classified as carcinogenic such as oak and beech dust especially in conjunction with additives for wood conditioning (chromate, wood preservative). Material containing asbestos must only be treated by specialists.

- Where the use of a dust extraction device is possible it shall be used.
- To achieve a high level of dust collection, use industrial vacuum cleaner DSS 25/35/50 for wood and/or minerals together with this tool.
- The work place must be well ventilated. The use of dust mask of filter class P2 is recommendend.

Warranty

According to our general terms of delivery for business dealings, suppliers have to provide to companies a warranty period of 12 months for redhibitory defects (to be documented by invoice or delivery note).

Damages due to natural wear, overstressing or improper handling are excluded from this warranty.

Damages due to material defects or production faults shall be eliminated free of charge by either repair or replacement.

Complaints will be accepted only if the tool is returned in non-dismantled condition to the manufacturer or an authorized Eibenstock service centre.

CE Declaration of Conformity

We declare under our sole responsibility that the product described under "Technical Data" is in conformity with the following standards or standardization documents:

EN 60 745

according to the provisions of the directives 2011/65/EU, 2004/108/EG, 2006/42/EG

Technical file (2006/42/EC) at:

Elektrowerkzeuge GmbH Eibenstock

Auersbergstraße 10

D – 08309 Eibenstock



Lothar Lässig
General Manager



Frank Markert
Head of Engineering

07.05.2014

Vigtige sikkerheds instruktioner

Vigtige instruktioner og advarsler er lokaliseret på maskinen ved hjælp af symboler:



Læs betjeningsvejledningen



Arbejd koncentreret og med stor omhu. Hold arbejdspladsen ren, og undgå farlige situationer.



Vorkehrungen zum Schutz des Bedieners treffen.

Under arbejdet bør du bære høreværn, beskyttelsesbriller, støvmaske, beskytteshandsker og robust arbejdstøj!



Anvend høreværn



Anvend sikkerhedsbriller



Anvend støvmaske



Anvend beskytteshandsker



Advarsel om general fare



Advarsel om højspænding



Advarsel om varm overflade



Fare for at blive revet, flået eller klemt.

Tekniske data

Rillefræser EMF 150

Spænding:	230 V ~
Motoreffekt:	2300 W
Best. nummer:	06712

Frekvens:	50 - 60 Hz
Hastighed uden belastning:	7500 omdr./min
Max. klinge diameter:	150 mm
Hulstørrelse:	Ø 22.2 mm
Skæredybde max.:	45 mm
Skærebredde max.:	46 mm
Beskyttelsesklasse:	II
Beskyttelsesgrad:	IP 20
Nettovægt:	ca. 58, kg
Støjdæmpet efter:	EN 55014 og EN 61000

Tilgængeligt tilbehør:

	Best. nummer:
Diamant skæreskive Standard	37440
Diamant skæreskive Premium	37441

Anvendelsesområder:

	Mursten	Beton	Gasbeton	Granit	Sandsten	Fliser
Standard	xxx		xx		xxx	x
Premium	xxx	xxx	x	xx	x	xx

x = egnet

xx = mere egnet

xxx = optimal

Indhold i leveringskarton

Rillefræser med 2 diamant skæreskiver (standard), værktøj og skæreskiver i en robust plast kasse.

Formål

Rillefræsere må kun bruges komplet monteret, i henhold til monteringsvejledningen.

Rillefræsere er beregnet til professionel brug.

Sammen med en klasse-M støvsuger, og de rette diamantskæreskiver, er rillefræsere beregnet til at skære riller og fordybninger i mineralske materialer, som f. eks: beton, mursten, gas beton, granit, kalksten og fliser uden at bruge vand.

Anvend kun skæreskiver der er anbefalet af leverandøren.



Sikkert arbejde med maskinen er kun muligt, hvis du læser disse brugsanvisninger fuldstændig og nøje følger anvisningerne heri. Hertil kommer, at de generelle sikkerheds anvisninger i den vedlagte brochure skal iagttages. Deltag evt. i et praktisk kursus før første brug.



Sikkert arbejde med maskinen er kun muligt, hvis du læser disse brugsanvisninger fuldstændig og nøje følger anvisningerne heri. Hertil kommer, at de generelle sikkerheds anvisninger i den vedlagte brochure skal iagttages. Deltag evt. i et praktisk kursus før første brug.



Maskinen må ikke blive våd, eller bruges i fugtige omgivelser.

- Brug ikke værktøjet i omgivelser med fare for eksplosion.
- Undgå at arbejde på stiger.
- Skær ikke i asbestholdige materialer.
- Modifikationer af værktøjet er forbudt.
- Brug aldrig maskinen uden støvskærmen.
- Bær aldrig værktøjet i sit kabel og tjek altid værktøj, kabel og stik før brug. Defekter må kun repareres af fagfolk. Indsæt kun stikket i stikkontakten, når værktøjet er afbrudt.
- Tilslut kun maskinen med fejlstrømsrelæ på max. 30 mA ved udendørs arbejde.
- Maskinen må kun køre under tilsyn. Træk stikket ud og sluk maskinen, hvis den ikke er under opsyn, fx i tilfælde af opsætning og nedtagning af maskinen, sæt kun stikket i stikkontakten når maskinen er slukket.
- Sluk maskinen, hvis den pludselig stopper, uanset grund. På denne måde kan du undgå, at den starter pludseligt hvis den ikke er under opsyn.
- Brug ikke maskinen, hvis en del af motorhuset er beskadiget, eller i tilfælde af skader på kontakten, kabel eller stikket.
- **Vær opmærksom på at den max hastighed der står på skæreskiven ikke er højere end den hastighed der står på maskinen.**
- Brug **KUN** diamant skæreskiver på maskinen.
- Skiverne må kun bruges til det anbefalede. F. eks: Slib ikke på muren med siderne af skæreskiven.
- Skæreskiverne skal opbevares og bruges som foreskrevet af producenten.
- Skæreskive flanger og andet tilbehør, skal passe meget nøjagtigt på spindlen af maskinen. Brug ingen reducerringe eller adaptere.

- Undersøg tilbehøret før brug. Brug ingen produkter der er defekte, revnet, eller i stykker på andre måder.
- Før brug, skal du sørge for, at værktøjet er korrekt fastsat og fastspændt.
Lad det køre inaktiv i omkring 30 sekunder i en sikker position. Hvis betydelige vibrationer opstår, eller hvis andre fejl opdages, sluk straks.
- Før altid kabel, og støvslange bagud, væk fra maskinen.
- El-værktøjet skal inspiceres visuelt af en tekniker med regelmæssige mellemrum.
- Berør ikke roterende dele.
- Personer under 16 år må ikke betjene maskinen.



- Under brug, skal brugeren og andre personer stående i nærheden bære høreværn, beskyttelsesbriller, sikkerhedshjelm samt beskyttelseshandsker.
- Pas på at andre personer omkring arbejdspladsen ikke rammes af partikler der flyver rundt..
- Hold håndtagene tørre, rene og fri for olie og fedt.
- **OBS! Skiverne drejer stadig rundt et stykke tid efter at maskinen er slukket.**

For yderligere sikkerhedsforskrifter henvises til vedlagte folder!



Elektrisk tilslutning

Kontroller først, korrespondancen af spænding og frekvens og sammenligne dem med oplysningerne på Mærkepladen. Spændings forskelle fra + 6 % til - 10 % er tilladt.


Rille fræsere er produceret i beskyttelsesklasse II.

Brug kun et forlænger-kabel med tilstrækkeligt tværsnit. Et tværsnit, som er for lille kan føre til et kraft tab samt overophedning af maskine og kabel

Maskinen er udstyret med langsom opstart, der sikrer at strømnettet ikke afbrydes, hvis ampere-niveauet bliver for højt.

Tænd og sluk af maskinen

Rillefræser EMF 150 er udstyret med en låsefunktion i kontakten

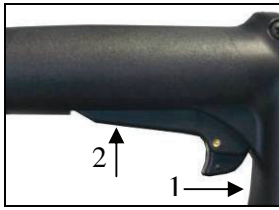

Aktivering: Skub kontakten frem (1) og derefter ned (2)

Deaktivering: Tryk på kontakten.

Fig.1

Brugsvejledning

Udvis forsigtighed, når der skæres riller i bærende vægge; se afsnittet "Oplysninger om strukturelle beregninger".

Pres ikke maskinen så hård, at skiven standser.

Brug kun rillefræseren til tørskæring.

For justering af skæredybden, se afsnittet om: "forindstilling af skæredybde". For at kompensere for unøjagtigheder, der kan opstå når det udskårne stykke brækkes af, skal skæredybden sættes til at være ca 3 mm dybere end den ønskede rilledybde.

Placer maskinen med den forreste/ nederste rulle på overfladen. Tænd for maskinen, og sænk stille og roligt maskinen ind i materialet.

Styr maskinen med begge håndtag, for at sikre at tilførslen passer med det materiale der skæres i.

Rillefræseren skal altid arbejde i en opafgående retning. Ellers er der fare for at maskinen bliver skubbet ukontrolleret ud af rillen

Fjern de resterende murdele med hammer og mejsel.

Det er ikke muligt at skære i buer, da diamant skiverne kunne blokere i materialet.

Når der brydes gennem vægge, og lign. med en mejsel hammer, kan de fleste skader på overfladen materiale undgås ved først at skære en med rillefræseren på maksimal dybde.

Ved skæring i ekstremt hårdt materiale, kan diamant skiven blive overophedet og herved blive skadet. Dette kan ses når det begynder at gnistre fra skiven.

I dette tilfælde, stop skæreprocessen, og lad klingen køre frit, uden belastning, i et stykke tid for at køle ned igen.

Mærkbart faldende arbejdsfremskridt, små gnister fra skiven, kan være tegn på at skiven er ved at være sløv. Skær herefter i abrasiv materiale f. eks sandsten, for at åbne skiven op igen.

Forud indstilling af skæredybde

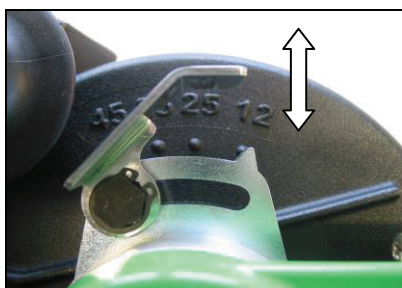


Fig.2

For justering, lås "quick-release" håndtaget op.

Ved at dreje beskyttelseskærmen, kan du justere skæredybden på skalaen, og låse den på håndtaget igen.

Låsehåndtaget skal altid være sikkert låst under arbejdsprocessen.

Skifte af diamantskiverne




OBS!

Skæreskiverne, mellemlægsskiverne, og flancebolten, kan blive meget varme under skæring. Du kan brænde dine hænde, eller rive dem på segmenterne.

Derfor skal der altid bruges beskyttelseshandsker, når der skiftes skæreskiver.

Før enhver form for arbejde på maskinen, tag stikket ud af stikkontakten.

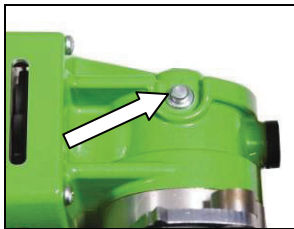

Tryk på spindellås knappen for at låse arbejdsspindlen.

Tryk kun på spindellåseknappen, når arbejdsspindlen står helt stille.

Ellers kan der forekomme skader på maskinen.

Fig.3



Løsn flancebolten med flancenøglen, og tag såvel diamantskiverne som mellemlægsskiverne ud.

Rengør arbejdsspindlen og alle de dele der skal monteres.


Fig.4

• **Indstilling af rillebredden:**

Rillebredden indstilles efter antallet og tykkelsen af mellemlægningskiverne, der ligges mellem diamantskiverne.

Rillebredden er udregnet som følger: Rillebredde = tykkelse på mellemlægningskiver + tykkelse på diamantskæreskiverne.

Tykkelse på mellemlægningskiver: 2, 3, 4, 5, 10 og 17 mm

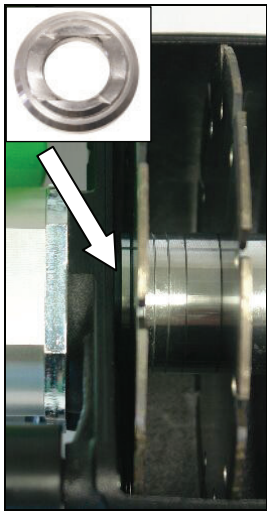

Først skal bagflancen monteres på arbejdsspindlen. (se pilen)

Bagflancen skal vende så uddybningen vender korrekt på arbejdsspindlen.

Monter skæreskiver og mellemlægningskiver på arbejdsspindlen, i den ønskede rillebredde.



Fig 5

Tryk på spindellåseknappen for at låse arbejdsspindlen. (se pilen på Fig. 4)

Skrue flancebolten på plads, og stram den med flancenøglen. (se Fig. 5)

- **Uanset hvad rillebredde der ønskes, skal alle mellemlægningsskiverne monteres.**
Ellers vil diamantskæreskiverne sidde løse under brug, og medføre skader på brugeren.
- **Mindst en af mellemlægningsskiverne skal være monteret mellem diamantskæreskiverne.**
- **Når diamantskæreskiverne monteres, skal du sikre dig at retningspilene på skiverne, passer med retningspilene på maskinen. (se pilen på motorhuset)**
- **Skift altid diamantskiverne i sæt.**

Lad maskinen køre uden belastning i et kort tidsrum, i en sikker position. Hvis maskinen ikke kører let rundt, stop den med det samme.

Brug altid originalt tilbehør.

Rillefræseren er i kraft og hastighed, optimalt justeret til Eibenstock-diamantskæreskiverne.

Således du altid opnår det bedste resultat, taget materialet der skæres i, i betragtning. (se tilbehør)

Støvudtag

Støv der forekommer under arbejdet, er sundhedsskadeligt. Det er derfor at EMF 150, skal bruges sammen med en støvsuger, samt at der skal bæres støvmaske.

Våd/tør støvsugeren DSS 25/35/50 er tilgængelig som tilbehør. Den kan tilsluttes direkte til støvskærmen.

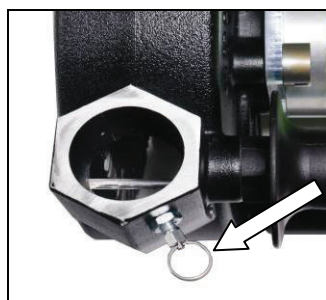


Fig.6

Støvslangen kan låses fast, så den ikke falder ud, ved hjælp af slangelåsen.(se pilen)



Abb.7

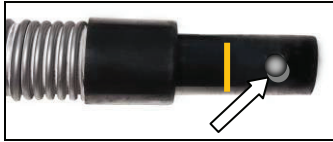


Abb.8

For at lave et passende hul i studsens på støvslangen, gør som følger:

Stik studsens fra støvslangen ind i hullet på støvskærmen.

Marker dybden på studsens med et stykke kridt.(se pilen)

Bor et hul 13 mm under den markerede linje, med et 6 mm bor ind i studsens.

Når du sætter studsens ind i hullet, træk ud i ringen på støvskærmen, og drej studsens indtil at låsen aktiveres. Nu er støvslangen aktiveret.

Overbelastningssikring

For at beskytte brugeren, motoren og værktøjet, er rillefræseren udstyret med en elektronisk og en termisk overbelastningssikring.

Elektronisk: For at advare brugeren om en overbelastning af maskinen, hvis der lægges for hårdt pres under skæringen, er den udstyret med en LED lampe i håndtaget. Hvis skæringen forgår optimalt, vil lampen ikke lyse. Men når maskinen bliver overbelastet, lyser denne lampe rødt. Så er det nødvendigt at give maskinen en pause i skæringen. Afbryd arbejdet, og tænd og sluk for maskinen, nu er den klar til at skære igen.

Termisk: I tilfælde af permanent overbelastning, beskytter en termisk sikring motoren for at blive ødelagt. Maskinen slukker automatisk, og kan først genstartes efter en bestemt afkølingsperiode. (ca. 2 min) Køleperiode afhænger af temperaturen på motoren, og den omgivende temperatur.

Information om strukturelle beregninger

Riller i bærende vægge er underlagt DIN 1053 del 1 standarden, eller land-specifikke omstændigheder..

Disse omstændigheder skal overholdes under alle omstændigheder.

Før arbejdet begyndes, konsulter med den ansvarlige struktur ingeniør, arkitekt, eller den bygningsansvarlige.

Den tilladte rilleddybde og bredde, afhænger af rillelængde, væg tykkelse samt materialet.

Vedligeholdelse



Før der begyndes på vedligeholdelse, skal stikket tages ud af stikkontakten.

Reparationer skal udføres af kvalificerede og erfarne folk. Efter enhver reparation, skal maskinen efterses af en el-specialist.

På grund af sit design, har maskinen brug for et minimum af vedligeholdelse og pleje. Følgende punkter skal dog iagttages:

- Hold altid maskinen og ventilationsåbninger rene for støv.
- Under arbejdet, vær opmærksom på at der ikke kommer partikler ind i maskinen.
- I tilfælde af defekt, skal reparationen udføres af et autoriseret værksted.

Miljøbeskyttelse



Råstofgenanvendelse i stedet for bortskaffelse af affald

For at undgå skader under transport, skal maskinen leveres i robust transportemballage. Indpakningen samt værktøj og tilbehør er fremstillet af genbrugsmaterialer og kan bortskaffes i overensstemmelse hermed. Værktøjets plastkomponenter er mærket i overensstemmelse med deres materiale, hvilket gør det muligt at fjerne miljøvenlig og differentieret på grund af tilgængelige indsamlingssteder.

Kun for EU lande

Elektrisk værktøj må ikke bortskaffes sammen med husholdningsaffald!



Under overholdelse af EU-direktiv 2012/19/EU om affald af elektrisk og elektronisk udstyr og dets gennemførelse i overensstemmelse med national lovgivning, elektriske værktøjer, som har nået til afslutningen af deres levetid skal indsamles særskilt og sendes tilbage til en genbrugsstation.

Støjniveau / Vibrationer

Støjen fra dette elværktøj bliver målt efter DIN 45 635, del 21. Støjniveauet kan på arbejdspladsen overstige 85dB (A), i dette tilfælde skal brugeren benytte en form for støjbeskyttelse.



Bær høreværn!

De typiske hånd-arm vibrationer er under 2.5 m/s².
De målte værdier er fastsat i henhold til EN 60 745.

Vibrationsstørrelse emissionsniveauet i dette oplysningsskema er blevet målt i overensstemmelse med et standardiseret test givet i EN 60 745 og kan anvendes til at sammenligne et redskab med en anden. Den kan benyttes til en indledende vurdering af belastningen.

Det erklærede vibrationsniveau repræsenterer de vigtigste anvendelser af værktøjet. Men hvis værktøjet bruges til forskellige formål, med forskelligt tilbehør eller dårligt vedligeholdt, kan vibrationsstørrelserne variere. Dette kan markant øge belastningen i løbet af den samlede arbejdsperiode.

Et skøn over niveauet for udsættelse af vibrationer, bør også tage hensyn til de tidspunkter, hvor værktøjet er slukket, eller når det kører, men ikke faktisk gør jobbet. Dette kan i væsentlig grad reducere belastningen over den samlede arbejdsperiode.

Yderligere sikkerhedsforanstaltninger for at beskytte operatøren fra virkningerne af vibrationer såsom: vedligeholde værktøj og tilbehør, holde hænderne varme, organisering af arbejdsmønstre.

Støvbeskyttelse

Støv fra materiale så som maling der indeholder bly, nogle træ typer, mineraler og metal kan være skadelige. Kontakt med, eller indånding af dette støv, kan forårsage allergiske reaktioner og/ eller åndedrætssygdomme til brugeren eller tilskuere.

Visse former for støv er klassificeret som kræftfremkaldende, så som ege- og bøgetræstøv især i forbindelse med tilsætningsstoffer til træbehandling (chromat, træbehandlingsmiddel). Materiale, som indeholder asbest, må kun behandles af specialister.

- Hvor brug af støvudsugning er muligt, skal det benyttes.
- For at sikre et højt niveau af støvsugning, brug da industri støvsuger DSS 25/35/50, for opsugning af træ og/eller mineraler sammen med denne maskine.
- Arbejdspladsen skal være godt ventileret.
- Brugen af støvmaskine klasse P2 anbefales.

Garanti

I henhold til vores generelle betingelser for levering til forretninger, er leverandøren nødt til at give kunden en garantiperiode på 12 måneder for mangler (skal dokumenteres ved faktura eller følgeseddel).

Skader som følge af naturlig slitage, overbelastning eller forkert håndtering, er undtaget fra denne garanti.

Skader som følge af materiale fejl eller produktions fejl skal elimineres gratis ved enten reparation eller udskiftning.

Klager vil blive accepteret, hvis værktøjet er leveret i samlet stand til fabrikanten eller et autoriseret Eibenstock servicecenter.

CE Overensstemmelseserklæring

Vi erklærer under almindeligt ansvar, at det produkt, der er beskrevet under „Tekniske data“, er i overensstemmelse med følgende standarder eller normative dokumenter:

EN 60 745

iht. bestemmelserne i direktiverne 2011/65/EU, 2004/108/EG, 2006/42/EG

Teknisk dossier (2006/42/EF) ved:

Elektrowerkzeuge GmbH Eibenstock
Auersbergstraße 10
D – 08309 Eibenstock



Lothar Lässig
General Manager



Frank Markert
Head of Engineering

07.05.2014